

SERVICE MANUAL

T7.220 / T7.235 / T7.250 / T7.260 / T7.270

Auto Command™ Tractor

T7.220 / T7.235 / T7.250 / T7.260

Power Command™ Tractor

Part number 47524342

English

June 2013

Replaces part number 84476222A



Link Product / Engine

Product	Market Product	Engine
T7.220 Power Command	North America	F4DFE613L*A
T7.235 Power Command	North America	F4DFE613K*A
T7.250 Power Command	North America	F4DFE613J*A
T7.260 Power Command	North America	F4DFE613H*A
T7.235 AutoCommand	North America	F4DFE613K*A
T7.250 AutoCommand	North America	F4DFE613J*A
T7.260 AutoCommand	North America	F4DFE613H*A
T7.270 AutoCommand	North America	F4DFE613G*A

Contents

INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase	10.1
[10.102] Pan and covers	10.2
[10.216] Fuel tanks	10.3
[10.210] Lift pump and lines	10.4
[10.218] Fuel injection system.....	10.5
[10.250] Turbocharger and lines.....	10.6
[10.254] Intake and exhaust manifolds and muffler	10.7
[10.500] Selective Catalytic Reduction (SCR) exhaust treatment.....	10.8
[10.400] Engine cooling system	10.9
[10.414] Fan and drive	10.10
[10.408] Oil cooler and lines.....	10.11
Transmission.....	21
[21.113] Powershift transmission	21.1
[21.155] Powershift transmission internal components.....	21.2
[21.160] Creeper	21.3
[21.166] Overdrive.....	21.4
[21.504] Continuously Variable Transmission (CVT)	21.5
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.6
[21.506] Continuously Variable Transmission (CVT) lubrication system	21.7
[21.507] Continuously Variable Transmission (CVT) internal components	21.8
[21.109] Transmission cooler and lines.....	21.9
Four-Wheel Drive (4WD) system	23
[23.202] Electro-hydraulic control	23.1
[23.314] Drive shaft.....	23.2
Front axle system	25

[25.100] Powered front axle	25.1
[25.102] Front bevel gear set and differential	25.2
[25.108] Final drive hub, steering knuckles, and shafts	25.3
[25.122] Axle suspension control	25.4
Rear axle system.....	27
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential	27.2
[27.120] Planetary and final drives	27.3
Power Take-Off (PTO).....	31
[31.101] Rear mechanical control	31.1
[31.104] Rear electro-hydraulic control.....	31.2
[31.114] Two-speed rear Power Take-Off (PTO)	31.3
[31.116] Three-speed rear Power Take-Off (PTO)	31.4
[31.119] Four-speed rear Power Take-Off (PTO).....	31.5
[31.146] Front Power Take-Off (PTO)	31.6
Brakes and controls	33
[33.202] Hydraulic service brakes	33.1
[33.110] Parking brake or parking lock	33.2
[33.220] Trailer brake hydraulic control.....	33.3
[33.224] Trailer brake pneumatic control	33.4
[33.350] Anti-lock Brake System (ABS)	33.5
Hydraulic systems.....	35
[35.000] Hydraulic systems.....	35.1
[35.300] Reservoir, cooler, and filters.....	35.2
[35.106] Variable displacement pump	35.3
[35.102] Pump control valves.....	35.4
[35.105] Charge pump.....	35.5
[35.322] Regulated/Low pressure system	35.6

[35.204] Remote control valves	35.7
[35.220] Auxiliary hydraulic pump and lines	35.8
[35.114] Three-point hitch control valve	35.9
[35.160] Front hitch controls and lines	35.10
[35.162] Front hitch cylinders and lines	35.11
Pneumatic system	36
[36.100] Pneumatic system.....	36.1
Hitches, drawbars, and implement couplings.....	37
[37.120] Rear three-point hitch linkage.....	37.1
[37.162] Front hitch.....	37.2
[37.110] Rear three-point hitch	37.3
[37.106] Automatic pickup hitch	37.4
Frames and ballasting	39
[39.100] Frame	39.1
Steering.....	41
[41.101] Steering control	41.1
[41.106] Tie rods.....	41.2
[41.200] Hydraulic control components.....	41.3
[41.216] Cylinders	41.4
[41.432] Autoguidance steering	41.5
Wheels.....	44
[44.511] Front wheels.....	44.1
[44.520] Rear wheels.....	44.2
Cab climate control	50
[50.100] Heating	50.1
[50.104] Ventilation	50.2
[50.200] Air conditioning.....	50.3
Electrical systems	55

[55.610] Ground speed control 55.1

[55.000] Electrical system 55.2

[55.100] Harnesses and connectors..... 55.3

[55.015] Engine control system..... 55.4

[55.301] Alternator..... 55.5

[55.302] Battery..... 55.6

[55.988] Selective Catalytic Reduction (SCR) electrical system 55.7

[55.640] Electronic modules..... 55.8

[55.513] Cab transmission controls..... 55.9

[55.024] Transmission control system..... 55.10

[55.020] Transmission speed sensors..... 55.11

[55.021] Transmission pressure sensors 55.12

[55.022] Transmission temperature sensors 55.13

[55.045] Front axle control system 55.14

[55.048] Rear Power Take-Off (PTO) control system 55.15

[55.049] Front Power Take-Off (PTO) control system 55.16

[55.031] Parking brake electrical system 55.17

[55.035] Remote control valve electric control 55.18

[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls..... 55.19

[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system..... 55.20

[55.047] Steering control system 55.21

[55.523] Cab hitch controls 55.22

[55.130] Rear three-point hitch electronic control system 55.23

[55.911] Global Positioning System (GPS) 55.24

[55.680] Autopilot/Autoguidance 55.25

[55.408] Warning indicators, alarms, and instruments 55.26

[55.350] Anti-lock Brake System (ABS) electrical system..... 55.27

[55.032] Trailer brake electrical system 55.28

[55.030] Service brake electrical system 55.29

[55.DTC] FAULT CODES.....	55.30
Platform, cab, bodywork, and decals.....	90
[90.100] Engine hood and panels	90.1
[90.150] Cab.....	90.2



Download the full PDF manual instantly.

Our customer service e-mail:

aservicemanualpdf@yahoo.com