

**21F**  
**121F**  
**221F**  
**321F**  
**Tier4**  
Compact Wheel Loader

**SERVICE MANUAL**

Part number 47768535B

English

April 2015

© 2015 CNH Industrial Italia S.p.A. All Rights Reserved.

# **SERVICE MANUAL**

**121F XT , 121F ZB , 21F XT , 21F ZB , 221F HS , 221F STD , 321F HS , 321F STD**

# Contents

---

## INTRODUCTION

|   |      |
|---|------|
| Engine.....   | 10   |
| [10.001] Engine and crankcase .....                           | 10.1 |
| [10.216] Fuel tanks .....                                     | 10.2 |
| Transmission.....   | 21   |
| [21.135] Powershift transmission external controls.....       | 21.1 |
| [21.160] Creeper .....  | 21.2 |
| Front axle system .....                                       | 25   |
| [25.100] Powered front axle .....                             | 25.1 |
| [25.102] Front bevel gear set and differential .....          | 25.2 |
| [25.108] Final drive hub, steering knuckles, and shafts ..... | 25.3 |
| Rear axle system.....   | 27   |
| [27.100] Powered rear axle.....                               | 27.1 |
| [27.106] Rear bevel gear set and differential .....           | 27.2 |
| [27.120] Planetary and final drives .....                     | 27.3 |
| [27.124] Final drive hub, steering knuckles, and shafts ..... | 27.4 |
| Brakes and controls .....                                     | 33   |
| [33.202] Hydraulic service brakes .....                       | 33.1 |
| [33.110] Parking brake or parking lock .....                  | 33.2 |
| [33.204] Front axle brake .....                               | 33.3 |
| Hydraulic systems.....  | 35   |
| [35.000] Hydraulic systems.....                               | 35.1 |
| [35.300] Reservoir, cooler, and filters.....                  | 35.2 |
| [35.104] Fixed displacement pump .....                        | 35.3 |
| [35.106] Variable displacement pump .....                     | 35.4 |
| [35.359] Main control valve.....                              | 35.5 |

|  |           |
|--|-----------|
| [35.357] Pilot system .....                                | 35.6      |
| [35.600] High flow hydraulics .....                        | 35.7      |
| [35.353] Hydraulic travel system .....                     | 35.8      |
| [35.701] Front loader arm hydraulic system .....           | 35.9      |
| [35.723] Front loader bucket hydraulic system .....        | 35.10     |
| [35.734] Tool quick coupler hydraulic system .....         | 35.11     |
| <b>Frames and ballasting .....</b>                         | <b>39</b> |
| [39.140] Ballasts and supports .....                       | 39.1      |
| <b>Steering .....</b>                                      | <b>41</b> |
| [41.101] Steering control .....                            | 41.1      |
| [41.200] Hydraulic control components .....                | 41.2      |
| [41.216] Cylinders .....                                   | 41.3      |
| <b>Electrical systems .....</b>                            | <b>55</b> |
| [55.000] Electrical system .....                           | 55.1      |
| [55.100] Harnesses and connectors .....                    | 55.2      |
| [55.045] Front axle control system .....                   | 55.3      |
| [55.408] Warning indicators, alarms, and instruments ..... | 55.4      |
| [55.DTC] FAULT CODES .....                                 | 55.5      |
| <b>Platform, cab, bodywork, and decals .....</b>           | <b>90</b> |
| [90.150] Cab .....   | 90.1      |

**Thank you very much for reading.**

**Go back to the website, at its bottom.**

**There is a button. Complete the process. You can get this complete manual instantly. NO WAITING.**

**Please click here.**



**GET MORE CONTENTS:**

**Power Transmission, Brake, Steering, Frame and Wheel, Hydraulic, System, Functional Description, Electrical System and more.....**

**Have questions. Please write to me.**

**aservicemanuapdf@yahoo.com**