



**SERVICE MANUAL**  
**CRAWLER EXCAVATOR**  
**CX75SR**  
**CX80**  
**TIER 3**

87676026A NA

Issued 01Aug 08

# CRAWLER EXCAVATOR CX75SR/CX80 TIER 3 SERVICE MANUAL

## TABLE OF CONTENTS

DIVISION/SECTION	SECTION N°	REFERENCE N°
<b>1 GENERAL INFORMATION</b>		
Safety, general information and standard torque data .....	1001	7-27691NA
General specifications and special torque setting .....	1002	SC75SRCX80-1002-0NA
<b>2 ENGINE</b>		
Removal and installation of the engine.....	2000	SM75SR2000-0EN
Engine specifications.....	*	
Disassembly and assembly of the engine .....	*	
<b>3 FUEL SYSTEM</b>		
Removal and installation of the fuel tank.....	3001	SM75SR3001-0EN
Fuel engine system .....	*	
<b>4 ELECTRICAL SYSTEM</b>		
Electrical and engine functions and service support .....	4001	SC75SRCX80-4001-0NA
Electrical equipment and electrical circuit diagrams.....	4020	SC75SRCX80-4020-0NA
<b>5 UNDERCARRIAGE</b>		
Removal and installation of tracks .....	5001	SM75SR5001-0EN
Rollers .....	5003	SM75SR5003-0EN
Take-up roller.....	5005	SM75SR5005-0EN
<b>6 DRIVE TRAIN</b>		
Removal and installation of the drive motor and final drive transmission.....	6001	SM75SR6001-0EN
Disassembly and assembly of the drive motor and final drive transmission.....	6002	SM75SR6002-0EN
Removal and installation of the swing motor and swing reduction gear .....	6003	SM75SR6003-0EN
Disassembly and assembly of the swing reduction gear .....	6004	See 8019
<b>7 UNDERCARRIAGE HYDRAULICS</b>		

\* Consult the Engine Service Manual

**8 UPPERSTRUCTURE HYDRAULICS**

Specifications, troubleshooting, checks and

hydraulic pressure settings.....	8001	SC75SRCX80-8001-0NA
Removal and installation of the hydraulic reservoir .....	8002	SM75SR8002-0EN
Removal and installation of the main hydraulic pump.....	8003	SM75SR8003-0EN
Removal and installation of the main hydraulic control valve - CX75SR .....	8004	SM75SR8004-0EN
Removal and installation of the main hydraulic control valve - CX80 .....	8004	SM80-8004-0EN
Removal and installation of the attachment cylinders.....	8005	SM75SR8005-0EN
Removal and installation of the hydraulic swivel.....	8006	SM75SR8006-0EN
Removal and installation of the pilot blocs.....	8007	SM75SR8007-0EN
Disassembly and assembly of the main hydraulic pump .....	8010	SM75SR8010-0EN
Disassembly and assembly of the main hydraulic control valve - CX75SR .....	8011	SM75SR8011-0EN
Disassembly and assembly of the main hydraulic control valve - CX80 .....	8011	SM80-8011-0EN
Disassembly and assembly of the attachment cylinders .....	8012	SM75SR8012-0EN
Disassembly and assembly of the hand control levers .....	8013	SM75SR8013-0EN
Disassembly and assembly of the foot control levers .....	8014	SM75SR8014-0EN
Disassembly and assembly of the solenoid valve block .....	8015	SM75SR8015-0EN
Disassembly and assembly of the cushion valve.....	8016	SM75SR8016-0EN
Disassembly and assembly of the hydraulic swivel .....	8018	SM75SR8018-0EN
Disassembly and assembly of the swing motor .....	8019	SM75SR8019-0EN
Hydraulic functions .....	8020	SC75SRCX80-8020-0NA
Hydraulic component functions.....	8030	SC75SRCX80-8030-0NA

**9 UPPERSTRUCTURE**

Air conditioning unit .....	9007	SM75SR9007-0EN
Large size hydraulic schematics - CX75SR.....	Pocket	87725725A
Large size electrical schematics - CX75SR.....	Pocket	87742052A
Large size hydraulic schematics - CX80.....	Pocket	KAJ11600-E00
Large size electrical schematics - CX80.....	Pocket	KAR11060-E00

NOTE: CNH Company reserves the right to make changes in the specification and design of the machine without prior notice and without incurring any obligation to modify units previously sold.

The description of the models shown in this manual has been made in accordance with the technical specifications known as of the date of design of this document.

# Section

# 1001

## SAFETY, GENERAL INFORMATION AND TORQUE SPECIFICATIONS

## GENERAL INFORMATION

### Cleaning

Clean all metal parts except bearings, in a suitable cleaning solvent or by steam cleaning. Do not use caustic soda for steam cleaning. After cleaning, dry and put oil on all parts. Clean oil passages with compressed air. Clean bearings in a suitable cleaning solvent, dry the bearings completely and put oil on the bearings.

### Inspection

Check all parts when the parts are disassembled. Replace all parts that have wear or damage. Small scoring or grooves can be removed with a hone or crocus cloth. Complete a visual inspection for indications of wear, pitting and the replacement of parts necessary to prevent early failures.

### Bearings

Check bearings for easy action. If bearings have a loose fit or rough action replace the bearing. Wash bearings with a suitable cleaning solvent and permit to air dry. **DO NOT DRY BEARINGS WITH COMPRESSED AIR.**

### Needle bearings

Before you press needle bearings in a bore always remove any metal protrusions in the bore or edge of the bore. Before you press bearings into position put petroleum jelly on the inside and outside diameter of the bearings.

### Gears

Check all gears for wear and damage. Replace gears that have wear or damage.

### Oil seals, O-rings and gaskets

Always install new oil seals, O-rings and gaskets. Put petroleum jelly on seals and O-rings.

### Shafts

Check all shafts that have wear or damage. Check the bearing and oil seal surfaces of the shafts for damage.

### Service parts

Always install genuine Case service parts. When ordering refer to the Parts Catalog for the correct part number of the genuine Case replacement items. Failures due to the use of other than genuine Case replacement parts are not covered by warranty.

### Lubrication

Only use the oils and lubricants specified in the Operator's or Service Manuals. Failures due to the use of non-specified oils and lubricants are not covered by warranty.

## SAFETY



*This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.*

To prevent injury always follow the Warning, Caution and Danger notes in this section and throughout the manual.

Put the warning tag shown below on the key for the keyswitch when servicing or repairing the machine. One warning tag is supplied with each machine. Additional tags Part Number 331-4614 are available from your service parts supplier



**WARNING:** *Read the operator's manual to familiarize yourself with the correct control functions.*



**WARNING:** *Operate the machine and equipment controls from the seat position only. Any other method could result in serious injury.*



**WARNING:** *This is a one man machine, no riders allowed.*



**WARNING:** *Before starting engine, study Operator's Manual safety messages. Read all safety signs on machine. Clear the area of other persons. Learn and practice safe use of controls before operating.*

*It is your responsibility to understand and follow manufacturers instructions on machine operation, service and to observe pertinent laws and regulations. Operator's and Service Manuals may be obtained from your Case dealer.*



**WARNING:** *If you wear clothing that is too loose or do not use the correct safety equipment for your job, you can be injured. Always wear clothing that will not catch on objects. Extra safety equipment that can be required includes hard hat, safety shoes, ear protection, eye or face protection, heavy gloves and reflector clothing.*



**WARNING:** *When working in the area of the fan belt with the engine running, avoid loose clothing if possible, and use extreme caution.*



**WARNING:** *When doing checks and tests on the equipment hydraulics, follow the procedures as they are written. DO NOT change the procedure.*



**WARNING:** *When putting the hydraulic cylinders on this machine through the necessary cycles to check operation or to remove air from a circuit, make sure all people are out of the way.*



**WARNING:** Use insulated gloves or mittens when working with hot parts.



**WARNING:** Lower all attachments to the ground or use stands to safely support the attachments before you do any maintenance or service.



**WARNING:** Pin sized and smaller streams of hydraulic oil under pressure can penetrate the skin and result in serious infection. If hydraulic oil under pressure does penetrate the skin, seek medical treatment immediately. Maintain all hoses and tubes in good condition. Make sure all connections are tight. Make a replacement of any tube or hose that is damaged or thought to be damaged. **DO NOT** use your hand to check for leaks, use a piece of cardboard or wood.



**WARNING:** When removing hardened pins such as a pivot pin, or a hardened shaft, use a soft head (brass or bronze) hammer or use a driver made from brass or bronze and a steel head hammer.



**WARNING:** When using a hammer to remove and install pivot pins or separate parts using compressed air or using a grinder, wear eye protection that completely encloses the eyes (approved goggles or other approved eye protectors).



**WARNING:** Use suitable floor (service) jacks or chain hoist to raise wheels or tracks off the floor. Always block machine in place with suitable safety stands.



**WARNING:** When servicing or repairing the machine, keep the shop floor and operator's compartment and steps free of oil, water, grease, tools, etc. Use an oil absorbing material and/or shop cloths as required. Use safe practices at all times.



**WARNING:** Some components of this machine are very heavy. Use suitable lifting equipment or additional help as instructed in this Service Manual.



**WARNING:** Engine exhaust fumes can cause death. If it is necessary to start the engine in a closed place, remove the exhaust fumes from the area with an exhaust pipe extension. Open the doors and get outside air into the area.



**WARNING:** When the battery electrolyte is frozen, the battery can explode if (1), you try to charge the battery, or (2), you try to jump start and run the engine. To prevent the battery electrolyte from freezing, try to keep the battery at full charge. If you do not follow these instructions, you or others in the area can be injured.



**Download the full PDF manual instantly.**

**Our customer service e-mail:**

**[aservicemanualpdf@yahoo.com](mailto:aservicemanualpdf@yahoo.com)**