

# MX Magnum

## Service Manual No. 7-85709B

### Table of Contents

Description	Section No.	Form No.
General	Tab 1	
Loctite Product Chart		8-98902
Standard Torque Specifications	1000	7-68611
General Specifications and Special Torques	1002	7-85682
Safety, General Information/Maintenance Schedule	1001	7-85750
Engines	Tab 2	
See Engine Service Manual for Engine Service		
Engine Removal and Installation	2002	7-86501
Fuel	Tab 3	
Fuel Tank	3001	7-86510
Electrical	Tab 4	
Electrical System How it Works and Troubleshooting	4001	7-85770
Electrical System How it Works and Troubleshooting Tractor S/N JJA0105001 and After	4001	7-91511
Electrical Schematic Poster		7-85350
Electrical Schematic Poster Tractor S/N JJA0105001 and After		7-94120
Steering	Tab 5	
Steering Column and Steering Hand Pump	5001	7-85781
Steering Cylinders	5003	7-87900
Power Train	Tab 6	
Powershift Transmission System How it Works and Troubleshooting	6000	7-85791
Transmission Input Shaft and Drive Plate	6001	7-86541
Input Drop Box	6002	7-86551
Engine Frame and Input Drop Box Split	6003	7-86560
Speed to Range Transmission Split	6005	7-86580
Speed Transmission	6006	7-86590
Range Transmission to Rear Frame Split	6007	7-86600
Range Transmission	6008	7-86610
Transmission Control Valves and inching Valve	6009	7-86620
Rear Frame	6011	7-86640
Hydraulic Pump Drive	6012	7-86650
Mechanical Front Drive MFD Control System How it Works	6013	7-86660
Differential Lock Control System How it Works	6014	7-86670
MFD Clutch Removal Without Tractor Split	6015	7-86680
MFD Drive Shaft	6016	7-86690
MFD Front Axle Removal and Installation	6017	7-86701
MFD Differential	6018	7-86711
MFD Differential Tractor S/N JJA0105001 and After	6018	7-94200
Rear Axle and Planetaries	6019	7-86720
Power Take Off Control System How it Works	6020	7-87931

**Reprinted**

# MX Magnum

## Service Manual No. 7-85709

### Table of Contents

Description	Section No.	Form No.
Power Train (Cont'd)	Tab 6	
PTO Assembly Single and Dual Speeds	6021	7-86731
MFD Axle and Planetaries	6022	7-89561
MFD Axle and Planetaries Tractor S/N JJA0105001 and After	6022	7-94210
Brakes	Tab 7	
Brake Valve	7001	7-86740
Brake Cylinders	7002	7-85950
Park Brake	7004	7-86760
Trailer Brakes Hydraulic and Pneumatic	7005	7-86770
Hydraulics	Tab 8	
Hydraulic Systems How it Works with Troubleshooting	8000	7-85811
Hydraulic Systems How it Works with Troubleshooting Tractor S/N JJA0105001 and After	8000	7-92810
How to Read Hydraulic Schematics	8000	8-94372
PTO and Differential Lock Valve	8002	7-86780
Remote Valve and Coupler Service	8003	7-86790
Remote Valve and Coupler Service Tractor S/N JJA0105001 and After	8003	7-92740
Remote Hydraulic System How it Works and Troubleshooting	8004	7-87920
Remote Hydraulic System How it Works and Troubleshooting Tractor S/N JJA0105001 and After	8004	7-92800
Steering Priority and Regulator Valve	8005	7-86800
Steering/Charge Pump	8006	7-86810
PFC Piston Pump and Hydraulic Filter	8007	7-86820
Hitch System How it Works	8008	7-88400
Hitch Control Valve	8009	7-87890
Tractor Hitch	8010	7-86832
Hydraulic Schematic Poster		7-86840
Hydraulic Schematic Poster Tractor S/N JJA0105001 and After		7-92820
Chassis	Tab 9	
Pedal and Pedal Switch Adjustments	9001	7-85890
Cab Removal	9005	7-86891
Cab Lift	9006	7-86901
Air Seat	9007	7-86910
Hood, Grill, Side Panels, Radiator Support and Air to Air Intercooler	9008	7-86920
Air Conditioning Troubleshooting	9010	7-91741
Air Conditioning System Service for Systems with R-134a Refrigerant	9020	7-91751
A/C System Troubleshooting Chart		7-92540

Description	Section No.	Form No.
Controller Systems	Tab 10	
Standard Instrumentation Programming and Fault Codes	10001	7-87830
Standard Instrumentation Programming and Fault Code Tractor S/N JJA0105001 and After	10001	7-94521
Hitch Controller Calibration and Fault Codes	10002	7-87020
Hitch Controller Calibration and Fault Codes Tractor S/N JJA0105001 and After	10002	7-94150
Hitch Controller Calibration and Fault Codes Tractor S/N JJA0105001 and After With Software Version 1.6.0.0 and After	10002	6-11240
Transmission Controller Calibration and Fault Codes	10003	7-87810
Transmission Controller Calibration and Fault Codes Tractor S/N JJA0105001 and After With Software Version 4.3.0.0 and After	10003	7-94491
Armrest Controller Calibration and Fault Codes	10004	7-87820
Armrest Controller Calibration and Fault Codes Tractor S/N JJA0105001 and After	10004	7-94140
Remote Hydraulics Controller Fault Codes	10005	7-88390
Remote Hydraulics Controller Fault Codes Tractor S/N JJA0105001 and After With Software Version 2.2.0.0 and After	10005	7-94131
PTO Controller Configuration and Fault Codes	10006	7-86280
PTO Controller Configuration and Fault Codes Tractor S/N JJA0105001 and After	10006	7-94390
Performance Monitor Controller Fault Codes	10008	7-86940
Performance Monitor Controller Fault Codes Tractor S/N JJA0105001 and After	10008	7-94530
Electronic Service Tool Users Manual	10010	6-12610



**Download the full PDF manual instantly.**

**Our customer service e-mail:**

**[aservicemanualpdf@yahoo.com](mailto:aservicemanualpdf@yahoo.com)**