

F910/F930 Front Mower



JOHN DEERE

TECHNICAL MANUAL

F910/F930
Front Mower

TM1301 (01APR86) English



TM1301 (01APR86)

LITHO IN U.S.A.
ENGLISH



F910/F930 FRONT MOWER TECHNICAL MANUAL TM-1301 (Apr-86)

SECTION AND GROUP CONTENTS

SECTION 10—GENERAL

- Group 05—Introduction and Safety Information
- Group 10—General Specifications
- Group 15—Cap Screw Torque
- Group 20—Tune-Up
- Group 25—Fuel and Lubrication
- Group 30—Serial Numbers

SECTION 20—ENGINE REPAIR

- Group 05—Engine Removal and Installation
- Group 10—Muffler

SECTION 30—FUEL AND AIR REPAIR

- Group 05—Fuel Pump
- Group 10—Fuel Tanks, Fuel Filters, Fuel Valve
and Lines

SECTION 40—ELECTRICAL REPAIR

- Group 05—PTO Clutch

SECTION 50—POWER TRAIN REPAIR

- Group 05—Transmission
- Group 10—Transmission Hand Control Linkage
(-360,000)
- Group 11—Transmission Foot Control Linkage
(360,001-)
- Group 15—Differential
- Group 20—Axles

SECTION 60—STEERING AND BRAKES REPAIR

- Group 05—Steering Valve
- Group 10—Brakes
- Group 15—Brake and Park Brake Linkage (-
360,000)
- Group 16—Brake and Park Brake Linkage (360,001-
)
- Group 20—Rear Axle and Wheels

SECTION 70—HYDRAULICS REPAIR

- Group 05—Hydraulic Control Valve
- Group 10—Weight Transfer Valve

Continued on next page

SECTION 80—MISCELLANEOUS REPAIR

- Group 05—Mower Gearbox
- Group 10—Mower Spindle

SECTION 210—GENERAL

- Group 05—Machine Operational Checkout

SECTION 220—ENGINE OPERATION AND TESTS

- Group 05—System Checkout
- Group 10—System Diagnosis

SECTION 230—FUEL AND AIR OPERATION AND TESTS

- Not used—Refer to Section 220

SECTION 240—ELECTRICAL OPERATION AND TESTS

- Group 05—System Checkout
- Group 10—System Diagnosis
- Group 15—Component Tests
- Group 20—Theory of Operation

SECTION 250—POWER TRAIN OPERATION AND TESTS

- Group 05—Transmission Hand Control Linkage Adjustment (, -360,000)
- Group 06—Transmission Foot Control Linkage Adjustment (360,000- ,)
- Group 10—Power Train Test and Adjustment
- Group 15—Theory of Operation

SECTION 260—STEERING AND BRAKES OPERATION AND TESTS

- Group 05—Theory of Operation

SECTION 270—HYDRAULICS OPERATION AND TESTS

- Group 05—Theory of Operation

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT® 1986
DEERE & COMPANY
Moline, Illinois
All rights reserved
A JOHN DEERE ILLUSTRATION

M45;0000A 1A 160486

Section 10

GENERAL INFORMATION

CONTENTS

	Page		Page
GROUP 05—INTRODUCTION AND SAFETY		GROUP 25—FUEL AND LUBRICATION	
Introduction	10-05-1	Fuel	10-25-1
Safety	10-05-2	Fuel Storage	10-25-1
GROUP 10—GENERAL SPECIFICATIONS		Engine Oil	10-25-2
Specifications		Transmission-Hydraulic Oil	10-25-2
F910 Front Mower	10-10-1	General Purpose Grease	10-25-3
F930 Front Mower	10-10-2	Cold Weather Operation	10-25-3
GROUP 15—CAP SCREW TORQUE		Alternative Lubricants	10-25-3
Bolt Torque Chart	10-15-1	Lubricant Storage	10-25-4
Metric Hardware Torque Specifications	10-15-2	GROUP 30—SERIAL NUMBERS	
O-Ring Boss Fitting Service		Serial Numbers	
Recommendations	10-15-3	Tractor PIN	10-30-1
GROUP 20—TUNE-UP		Engine	10-30-1
Tune-Up		Transmission	10-30-2
Specifications	10-20-1	Differential	10-30-2
Adjustments	10-20-2	Hydraulic Control Valve	10-30-2

M45;1000A 1 271185

SAFETY AND YOU



CAUTION: This safety symbol is used for important safety messages. When you see this symbol, follow the safety message to avoid personal injury.



4A9;T81389 M45;1005A 3 090185

AVOID FIRE HAZARDS

Be prepared if an accident or fire should occur. Know where the first aid kit and the fire extinguishers are located—know how to use them.

Do not smoke while you fill the fuel tank, service fuel system or handle highly flammable material.

Do not remove fuel cap or add fuel to tank when engine is hot or running. Allow engine to cool for several minutes.

Do not use open pans of gasoline or diesel fuel for cleaning parts. Use good commercial, nonflammable solvents.

Provide adequate ventilation when charging batteries.

Do not check battery charge by placing metal objects across the posts.

Do not allow sparks or open flame near batteries.

Do not smoke near battery.


Never check fuel or battery electrolyte with an open flame.

Never use an open flame to look for leaks anywhere on the equipment.

Never use an open flame as light anywhere on or around the equipment.

When preparing engine for storage, remember that inhibitor is volatile and therefore dangerous. Seal and tape openings after adding the inhibitor. Keep container tightly closed when not in use.

Inspect electrical wiring for worn or frayed insulation. Install new wiring if wires are damaged.

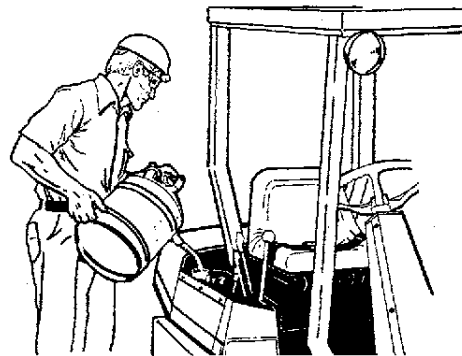

4A9;M34554 M45;1005A 4 090184

Thank you very much for reading.

Go back to the website, at its bottom.

There is a button. Complete the process. You can get this complete manual instantly. NO WAITING.

Please click here.



GET MORE CONTENTS:

Power Transmission, Brake, Steering, Frame and Wheel, Hydraulic, System, Functional Description, Electrical System and more.....

Have questions. Please write to me.

aservicemanuapdf@yahoo.com