

# CONTENTS

<b>CHAPTER 1 GENERAL</b> .....	<b>1-1</b>
1. TRACTOR IDENTIFICATION .....	1-3
2. TRACTOR VIEW .....	1-4
3. GENERAL PRECAUTIONS	
3.1 ASSEMBLY AND DISASSEMBLY .....	1-5
3.2 ELECTRICAL SYSTEM .....	1-6
3.3 TUBE AND RUBBERS .....	1-7
3.4 LUBRICANT .....	1-7
4. HANDLING PRECAUTIONS FOR ELECTRICAL PARTS AND WIRING .....	1-8
5. SPECIFICATION .....	1-9
6. LUBRICANTS, FUEL AND COOLANT .....	1-10
7. TIGHTENING TORQUE .....	1-11
7.1 GENERAL USE SCREW, BOLTS AND NUTS .....	1-11
7.2 STUD BOLTS .....	1-11
7.3 AMERICAN STANDARD SCREW, BOLTS AND NUTS WITH UNC OR UNF THREADS .....	1-12
8. MAINTENANCE CHECK LIST .....	1-13
9. CHECK AND MAINTENANCE .....	1-15
9.1 DAILY CHECK .....	1-15
9.2 EVERY 50 HOURS .....	1-19
9.3 EVERY 100 HOURS .....	1-21
9.4 EVERY 200 HOURS .....	1-26
9.5 EVERY 400 HOURS .....	1-31
9.6 EVERY 600 HOURS .....	1-32
9.7 EVERY 800 HOURS .....	1-32
9.8 EVERY 1 YEAR .....	1-32
9.9 EVERY 2 YEARS .....	1-33
9.10 SERVICE AS REQUIRED .....	1-35
10. TIRES .....	1-38
<b>CHAPTER 2 ENGINE</b> .....	<b>2-1</b>
1. FEATURE .....	2-3
2. LUBRICATING SYSTEM .....	2-4
3. COOLING SYSTEM .....	2-5
4. FUEL SYSTEM .....	2-6
5. TROUBLESHOOTING .....	2-7
6. SERVICING SPECIFICATION .....	2-10
6.1 ENGINE BODY .....	2-10
6.2 LUBRICATING SYSTEM .....	2-13
6.3 COOLING SYSTEM .....	2-14

6.4 FUEL SYSTEM .....	2-14
6.5 TIGHTENING TORQUE .....	2-15
7. DISASSEMBLING AND MAINTENANCE .....	2-16
7.1 SEAPRATING THE ENGINE .....	2-16
7.2 ENGINE DISASSEMBLED VIEW .....	2-25
7.3 ENGINE BODY .....	2-27
7.4 LUBRICATING SYSTEM .....	2-50
7.5 COOLING SYSTEM .....	2-52
7.6 FUEL SYSTEM .....	2-54

**CHAPTER 3 CLUTCH ..... 3-1**

1. FEATURES .....	3-3
2. TROBLESHOOTING .....	3-4
3. SPECIFICATIONS, TIGHTENING TROQUES AND SPECIAL TOOLS .....	3-5
3.1 SPECIFICATIONS .....	3-5
3.2 TIGHTENING TORQUES .....	3-5
3.3 SPECIAL TOOLS .....	3-5
4. CHECK, DISASSEMBLYING AND MAINTENANCE .....	3-6
4.1 ADJUSTMENT OF PEDAL .....	3-6
4.2 DISASSEMBLING AND ASSEMBLY OF CLUTCH .....	3-7
4.3 INSPECTION AND REPAIR .....	3-13

**CHAPTER 4 TRANSMISSION SYSTEM ..... 4-1**

1. STRUCTURE .....	4-3
1.1 POWER TRAIN DIAGRAM .....	4-3
1.2 POWER TRAIN .....	4-4
1.3 TRANSMISSION SHIFT LINKAGE STRUCTURE .....	4-10
2. TROUBLESHOOTING .....	4-15
2.1 TROUBLESHOOTING FOR SHUTTLE SHIFT .....	4-15
2.2 TROUBLESHOOTING FOR MAIN SHIFTS SECTION IN OPERATION ERROR .....	4-15
2.3 TROUBLESHOOTING FOR AUXILIARY AND CREEP SHIFTS IN OPERATION ERROR .....	4-16
2.4 TROUBLESHOOTING FOR REAR DIFFERENTIAL GEAR IN OPERATION ERROR .....	4-16
2.5 TROUBLESHOOTING FOR FRONT WHEEL DRIVE IN OPERATION ERROR .....	4-17
2.6 TROUBLESHOOTING FOR PTO CLUTCH IN OPERATION ERROR .....	4-17
2.7 TROUBLESHOOTING FOR PTO IN OPERATION ERROR .....	4-17
2.8 TROUBLESHOOTING FOR PARKING BRAKE IN OPERATION ERROR .....	4-17
3. SPECIFICATIONS .....	4-18
3.1 TIGHTENING TORQUES .....	4-18
4. DISASSEMBLING AND MAINTENANCE .....	4-19
4.1 DISASSEMBLING TRANSMISSION .....	4-19
4.2 SERVICING .....	4-54

---

<b>CHAPTER 5 REAR AXLE .....</b>	<b>5-1</b>
1. STRUCTURE .....	5-3
2. TROUBLESHOOTING .....	5-4
3. TIGHTENING TORQUE .....	5-5
4. DISASSEMBLING AND MAINTENANCE .....	5-6
4.1 DISASSEMBLING REAR AXLE .....	5-6
4.2 MAINTENANCE .....	5-10
<b>CHAPTER 6 BRAKE.....</b>	<b>6-1</b>
1. STRUCTURE .....	6-3
2. TROUBLESHOOTING .....	6-5
3. SPECIFICATIONS .....	6-5
4. TIGHTENING TORQUE .....	6-6
5. CHECK,DISASSEMBLING AND MAINTENANCE .....	6-7
5.1 ADJUSTMENT OF THE BRAKE .....	6-7
5.2 DISASSEMBLING AND ASSEMBLY .....	6-8
5.3 SERVICING .....	6-11
<b>CHAPTER 7 FRONT AXLE .....</b>	<b>7-1</b>
1. STRUCTURE .....	7-3
2. TROUBLESHOOTING .....	7-4
3. SPECIFICATIONS .....	7-5
4. TIGHTENING TORQUE .....	7-7
5. CHECK,DISASSEMBLING AND MAINTENANCE .....	7-8
5.1 CHECK AND MAINTENANCE .....	7-8
5.2 SEPARATING FRONT AXLE .....	7-10
5.3 DISASSEMBLING THE FRONT AXLE .....	7-12
5.4 SERVICING .....	7-22
<b>CHAPTER 8 STEERING SYSTEM .....</b>	<b>8-1</b>
1. STRUCTURE .....	8-3
1.1 CHARACTERISTICS.....	8-3
1.2 HYDRAULIC CIRCUIT OF POWER STEERING SYSTEM .....	8-4
1.3 GEAR PUMP .....	8-5
1.4 POWER STEERING UNIT .....	8-6
1.5 STEERING CYLINDER .....	8-7
1.6 OIL FLOW .....	8-8
2. TROUBELSHOOTING .....	8-10
3. SPECIFICATIONS .....	8-11
4. DISASSEMBLING AND MAINTENANCE .....	8-12

---

4.1 SEPARATING THE HYDRAULIC PUMP .....	8-12
4.2 SEPARATING THE STEERING UNIT .....	8-14
4.3 DISASSEMBLING OF THE STEERING CYLINDER .....	8-23
4.4 SERVICING .....	8-24

**CHAPTER 9 HYDRAULIC SYSTEM ..... 9-1**

1. STRUCTURE .....	9-3
1.1 HYDRAULIC OIL FLOW SHEMATIC .....	9-3
1.2 HYDRAULIC CIRCUIT SHEMATIC .....	9-4
1.3 HYDRAULIC FILTER SHEMATIC .....	9-5
1.4 HYDRAULICPUMP SHEMATIC .....	9-5
1.5 POWER STEERING SYSTEM .....	9-6
1.6 PTO CLUTCH VALVE SYSTEM .....	9-8
1.7 4WD,Q/T AND Q/T (AB) SYSTEM.....	9-9
1.8 JOYSTICK VALVE .....	9-10
1.9 HORIZONTAL CONTROL SYSTEM (ONLY JP) .....	9-11
1.10 HYDRAULIC POWER LIFT SYSTEM.....	9-12
1.11 AUXILIARY CONTROL VALVE (IF EQUIPPED) .....	9-13
2. TROUBLINGSHOOTING .....	9-14
2.1 JOYSTICK VALVE .....	9-14
2.2 HYDRAULIC LIFT SYSTEM .....	9-15
3. CHECKING,DISASSEMBLING AND MAINTENANCE .....	9-16
3.1 HYDRAULIC FILTER .....	9-16
3.2 HYDRAULIC PUMP.....	9-16
3.3 POWER STEERING UNIT.....	9-18
3.4 PTO CLUTCH VALVE .....	9-19
3.5 4WA,Q/T AND Q/T(AB) VALVE.....	9-23
3.6 JOYSTICK VALV .....	9-27
3.7 HORIZONTAL CONTROL VALVE .....	9-28
3.8 HYDRAULIC LIFT SYSTEM .....	9-30

**CHAPTER 10 CABIN SYSTEM ..... 10-1**

1. STRUCTURE .....	10-3
1.1 HEATER.....	10-3
1.2 AIR-CONDITIONER .....	10-4
2. TROUBLESHOOTING .....	10-6
3. INSPECTION AND ADJUSTMENTS .....	10-14

---

<b>CHAPTER11 ELECTRIC SYSTEM .....</b>	<b>11-1</b>
1. HOW TO WIRING DIAGRAM .....	11-3
1.1 WIRE CODE .....	11-3
1.2 WIRE SIZEW .....	11-3
1.3 INSTRUMENT PANEL BULBS .....	11-4
1.4 RELAY AND SWITCH .....	11-5
1.5 MULTIPLE SWITCH .....	11-5
1.6 RELAY BOX .....	11-6
1.7 FUSE CHECK .....	11-7
1.8 WIRING DIAGRAM .....	11-9
2. INSTRMENT PANEL .....	11-11
2.1 SYMBOL DESCRIPTION .....	11-11
2.2 CIRCUIT DIAGRAM OF INSTRUMENT(USA) .....	11-14
3. STSRTING SYSTEM .....	11-15
3.1 IGNITION CIRCUIT(WITHOUT THE INSTALLATION OF HORIZONTAL CONTROLLER .....	11-15
3.2 IGNITION CIRCUIT(HORIZONTAL CONTROL INSTALLATION EXPECTATION ONLY JP .....	11-16
3.3 MAJOR COMPONENTS .....	11-17
4. CHARGING SYSTEM .....	11-22
4.1 CIRCUIT DIAGRAM .....	11-22
4.2 AC (ALTERNATING CURRENT)ALTERNATOR .....	11-23
5. ENGINE GLOW PLUG SYSTEM .....	11-25
5.1 CIRCUIT DIAGRAM .....	11-25
5.2 MAJOR COMPONENTS .....	11-26
6. PTO SYSTEM(ONLY USA) .....	11-29
6.1 CIRCUIT DIAGRAM .....	11-29
6.2 CIRCUIT DESCRIPTION .....	11-30
6.3 TROUBLESHOOTING .....	11-30
7. ROTARY LEVEL CONTROL INSTALLATION(ONLY JP) .....	11-31
7.1 SYSTEM COMPOSITION PARTS .....	11-31
7.2 OUTLINE .....	11-32
7.3 LEVEL CONTROL INSTALLATION FUCTION .....	11-34
7.4 ELECTRIC CIRCUIT .....	11-36
7.5 TERMINAL ARRANGEMENT TABLE .....	11-37
8. QUECK TURN(ONLY JP) .....	11-38
8.1 ELECTRIC CIRCUIT .....	11-38
8.2 MAIN PARTS COMPOSITION .....	11-40
8.3 REPAIRS FOR QUECK TURN1 MALFUCTION .....	11-42
9. AIR CONDITIONING SYTEM .....	11-43
9.1 CIRCUIT DIAGRAM .....	11-43
9.2 MAJPR COMPONENTS .....	11-44
10.HEATER SYSTEM .....	11-46

**Thank you very much for reading. need complete manual.**

**Please Go back to the website, at its bottom.**

**There is a button. BUY NOW...**

**You can get this complete manual instantly. NO WAITING.**

**Please click here.**



**GET MORE CONTENTS:**

**Power Transmission, Brake, Steering, Frame and Wheel, Hydraulic, System, Functional Description, Electrical System and more.....**

**Have questions. Please write to me.  
aservicemanuapdf@yahoo.com**