


# SERVICE MANUAL

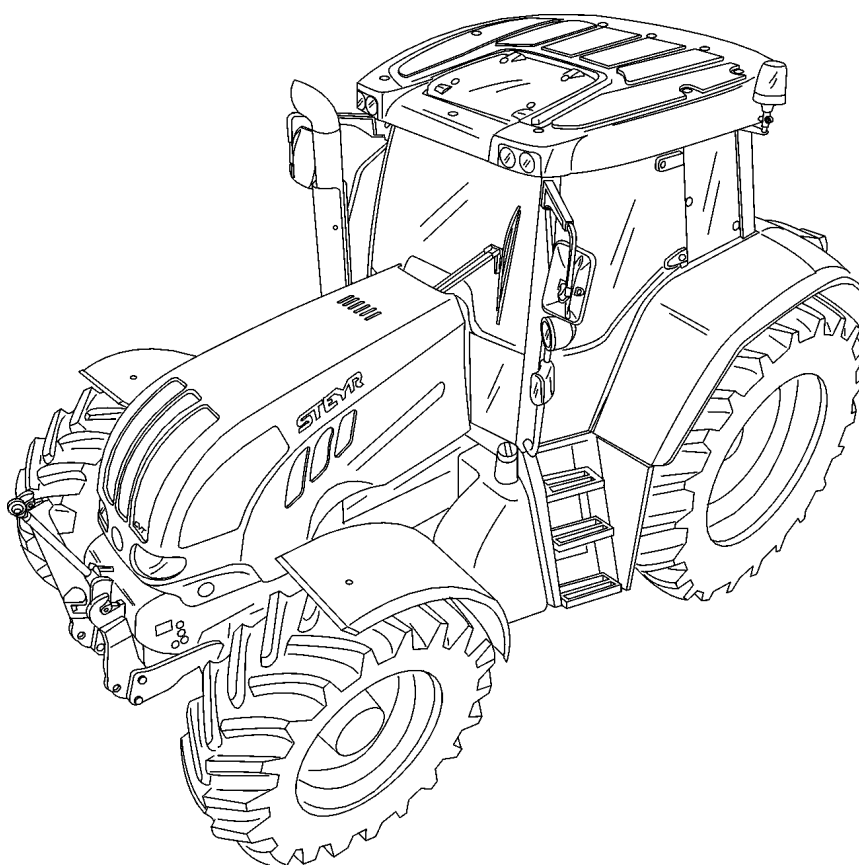

**CVT6140**  
**CVT6150**  
**CVT6160**  
**CVT6175**  
**CVT6195**

# Contents

---

## INTRODUCTION

Engine.....	10
[10.001] Engine and crankcase .....	10.1
[10.106] Valve drive and gears .....	10.2
[10.101] Cylinder heads .....	10.3
[10.105] Connecting rods and pistons.....	10.4
[10.103] Crankshaft and flywheel.....	10.5
[10.218] Fuel injection system.....	10.6
[10.250] Turbocharger and lines.....	10.7
[10.254] Intake and exhaust manifolds and muffler .....	10.8
[10.400] Engine cooling system .....	10.9
[10.414] Fan and drive .....	10.10
[10.304] Engine lubrication system.....	10.11
Transmission.....	21
[21.504] Continuously Variable Transmission (CVT) .....	21.1
[21.505] Continuously Variable Transmission (CVT) external controls.....	21.2
[21.506] Continuously Variable Transmission (CVT) lubrication system .....	21.3
[21.507] Continuously Variable Transmission (CVT) internal components.....	21.4
Four-Wheel Drive (4WD) system .....	23
[23.202] Electro-hydraulic control .....	23.1
[23.314] Drive shaft.....	23.2
Front axle system .....	25
[25.100] Powered front axle .....	25.1
[25.102] Front bevel gear set and differential .....	25.2
[25.108] Final drive hub, steering knuckles, and shafts .....	25.3
[25.122] Axle suspension control.....	25.4

<b>Rear axle system</b> .....	<b>27</b>
[27.100] Powered rear axle.....	27.1
[27.106] Rear bevel gear set and differential.....	27.2
[27.120] Planetary and final drives.....	27.3
<b>Power Take-Off (PTO)</b> .....	<b>31</b>
[31.104] Rear electro-hydraulic control.....	31.1
[31.119] Four-speed rear Power Take-Off (PTO).....	31.2
[31.142] Front Power Take-Off (PTO) control.....	31.3
[31.146] Front Power Take-Off (PTO).....	31.4
<b>Brakes and controls</b> .....	<b>33</b>
[33.202] Hydraulic service brakes.....	33.1
[33.110] Parking brake or parking lock.....	33.2
[33.220] Trailer brake hydraulic control.....	33.3
[33.204] Front axle brake.....	33.4
[33.200] Brake cooling.....	33.5
<b>Hydraulic systems</b> .....	<b>35</b>
[35.000] Hydraulic systems.....	35.1
[35.106] Variable displacement pump.....	35.2
[35.359] Main control valve.....	35.3
[35.204] Remote control valves.....	35.4
[35.114] Three-point hitch control valve.....	35.5
[35.116] Three-point hitch cylinder.....	35.6
<b>Steering</b> .....	<b>41</b>
[41.200] Hydraulic control components.....	41.1
[41.216] Cylinders.....	41.2
[41.432] Autoguidance steering.....	41.3
<b>Cab climate control</b> .....	<b>50</b>
[50.104] Ventilation.....	50.1

[50.200] Air conditioning .....	50.2
<b>Electrical systems .....</b>	<b>55</b>
[55.000] Electrical system .....	55.1
[55.100] Harnesses and connectors .....	55.2
[55.525] Cab engine controls .....	55.3
[55.015] Engine control system .....	55.4
[55.301] Alternator .....	55.5
[55.302] Battery .....	55.6
[55.202] Cold start aid .....	55.7
[55.011] Fuel tank system .....	55.8
[55.010] Fuel injection system .....	55.9
[55.014] Engine intake and exhaust system .....	55.10
[55.012] Engine cooling system .....	55.11
[55.013] Engine oil system .....	55.12
[55.640] Electronic modules .....	55.13
[55.513] Cab transmission controls .....	55.14
[55.024] Transmission control system .....	55.15
[55.020] Transmission speed sensors .....	55.16
[55.021] Transmission pressure sensors .....	55.17
[55.022] Transmission temperature sensors .....	55.18
[55.023] Transmission position sensors .....	55.19
[55.045] Front axle control system .....	55.20
[55.048] Rear Power Take-Off (PTO) control system .....	55.21
[55.049] Front Power Take-Off (PTO) control system .....	55.22
[55.051] Cab Heating, Ventilation, and Air-Conditioning (HVAC) controls .....	55.23
[55.050] Heating, Ventilation, and Air-Conditioning (HVAC) control system .....	55.24
[55.519] Cab brake controls .....	55.25
[55.030] Service brake electrical system .....	55.26
[55.032] Trailer brake electrical system .....	55.27

[55.512] Cab controls .....	55.28
[55.035] Remote control valve electric control .....	55.29
[55.036] Hydraulic system control .....	55.30
[55.047] Steering control system .....	55.31
[55.523] Cab hitch controls .....	55.32
[55.130] Rear three-point hitch electronic control system .....	55.33
[55.160] Front hitch electronic control system .....	55.34
[55.680] Autopilot/Autoguidance .....	55.35
[55.510] Cab or platform harnesses and connectors .....	55.36
[55.408] Warning indicators, alarms, and instruments .....	55.37
[55.DTC] FAULT CODES .....	55.38

**Thank you very much for reading.**

**Go back to the website, at its bottom.**

**There is a button. Complete the process. You can get this complete manual instantly. NO WAITING.**

**Please click here.**



**GET MORE CONTENTS:**

**Power Transmission, Brake, Steering, Frame and Wheel, Hydraulic, System, Functional Description, Electrical System and more.....**

**Have questions. Please write to me.**

**aservicemanuapdf@yahoo.com**