

# 2150 AND 2255 TRACTORS



 
JOHN DEERE

## TECHNICAL MANUAL 2150 AND 2255 TRACTORS

TM4401 (01NOV87) English

JOHN DEERE WERKE MANNHEIM  
TM4401 (01NOV87)

LITHO IN THE U.S.A.  
ENGLISH



# 2150 AND 2255 TRACTORS TECHNICAL MANUAL TM-4401 (Nov-87)

## CONTENTS

### SECTION 10 - GENERAL

- Group 00 - Specifications and Special Tools
- Group 05 - Pre-delivery, Delivery and After-Sales Inspections
- Group 10 - Lubrication and Periodic Service
- Group 15 - Engine and Tractor Tune-Up
- Group 20 - Tractor Separation

### SECTION 20 - ENGINE

- Group 00 - Specifications and Special Tools
- Group 05 - General Information, Diagnosing Malfunctions
- Group 10 - Cylinder Head, Valves and Camshaft
- Group 15 - Cylinder Block, Liners, Pistons and Connecting Rods
- Group 20 - Crankshaft, Main Bearings and Flywheel
- Group 25 - Timing Gear Train
- Group 30 - Engine Lubrication System
- Group 35 - Engine Cooling System

### SECTION 30 - FUEL AND AIR INTAKE SYSTEM

- Group 00 - Specifications and Special Tools
- Group 05 - Diagnosing Malfunctions
- Group 10 - Fuel Tank, Fuel Transfer Pump and Fuel Filter
- Group 15 - Roto Diesel Fuel Injection Pump
- Group 20 - Fuel Injection Nozzles
- Group 25 - Cold Weather Starting Aid
- Group 30 - Speed Control Linkage
- Group 35 - Air Cleaner

### SECTION 40 - ELECTRICAL SYSTEM

- Group 00 - Specifications and Special Tools
- Group 05 - Description, Diagnosing Malfunctions and Tests
- Group 06 - Connector Repair
- Group 10 - Wiring Harnesses
- Group 15 - Controls and Instruments
- Group 20 - Lighting Systems
- Group 25 - Wiring Diagram
- Group 30 - Starting Motor
- Group 35 - Alternator

COPYRIGHT® 1988  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved  
Previous Edition  
Copyright® 1982, 1984, 1985  
DEERE & COMPANY

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

---

## CONTENTS - Continued

### SECTION 50 - POWER TRAIN

- Group 00 - Specifications and Special Tools
- Group 05 - Description, Operation and Lubricating System
- Group 10 - Clutch Operating Linkages
- Group 15 - Engine Clutch
- Group 20 - Hi-Lo Shift Unit
- Group 25 - Reverser Transmission
- Group 30 - Transmission Shift Linkages
- Group 35 - Synchronized Transmission and Transmission Oil Pump
- Group 40 - Collar Shift Transmission and Transmission Oil Pump
- Group 45 - Differential
- Group 50 - Final Drives
- Group 55 - Independent PTO
- Group 60 - Continuous-Running PTO
- Group 65 - Mechanical Front Wheel Drive

### SECTION 60 - STEERING SYSTEM AND BRAKES

- Group 00 - Specifications and Special Tools
- Group 05 - Power Steering
- Group 10 - Brakes

### SECTION 70 - HYDRAULIC SYSTEM

- Group 00 - Specifications and Special Tools
- Group 05 - Description, Diagnosing Malfunctions and Tests
- Group 10 - Oil Reservoir, Filter, Valves and Oil Cooler
- Group 15 - Hydraulic Pump
- Group 20 - Rockshaft
- Group 25 - Selective Control Valves (Poppet Valve Type) and ISO Coupler
- Group 26 - Selective Control Valves (Spool Type) and Quick Coupler
- Group 30 - Remote Cylinder

### SECTION 80 - MISCELLANEOUS

- Group 00 - Specifications and Special Tools
- Group 05 - Front Axle
- Group 10 - Front Wheels

### SECTION 90 - OPERATOR'S STATION

- Group 00 - Specifications and Special Tools
- Group 05 - Seat
- Group 10 - Roll-Gard® Protective Structure

# Section 10 GENERAL

## CONTENTS OF THIS SECTION

	Page		Page
<b>GROUP 00 - SPECIFICATIONS AND SPECIAL TOOLS</b>		<b>GROUP 05 - PREDELIVERY, DELIVERY AND AFTER-SALES INSPECTIONS</b>	
Specifications .....	10-00-3	Tractor Storage .....	10-05-1
Serial Numbers .....	10-00-3	Predelivery Inspection .....	10-05-2
Model Numbers .....	10-00-3	Delivery Inspection .....	10-05-8
Engine .....	10-00-3	After-Sales Inspection .....	10-05-9
Engine Clutch .....	10-00-4		
Cooling System .....	10-00-4	<b>GROUP 10 - LUBRICATION AND SERVICE</b>	
Fuel System .....	10-00-4	Lubrication And Service .....	10-10-1
Electrical System .....	10-00-5		
Synchronized Transmission .....	10-00-5	<b>GROUP 15 - TUNE-UP</b>	
Collar Shift Transmission .....	10-00-5	Preliminary Engine Testing .....	10-15-1
Hi-Lo Shift Unit .....	10-00-5	Dynamometer Test .....	10-15-1
Reverser Transmission .....	10-00-5	Testing Compression Pressure .....	10-15-2
Differential and Final Drives .....	10-00-6	Engine Tune-Up .....	10-15-3
Differential Lock .....	10-00-6	Checking Tractor Operation .....	10-15-8
PTO .....	10-00-6	Standard Torques .....	10-15-9
Mechanical Front Wheel Drive .....	10-00-7		
Power Steering .....	10-00-7	<b>GROUP 20 - TRACTOR SEPARATION</b>	
Foot Brakes .....	10-00-7	Separating Between Engine And	
Handbrake .....	10-00-7	Tractor Front End .....	10-20-1
Hydraulic System .....	10-00-7	Removal and Installation of Engine .....	10-20-7
Capacities .....	10-00-7	Removal and Installation of	
Travel Speeds .....	10-00-8	Clutch Housing .....	10-20-8
Front and Rear Wheels .....	10-00-8	Removal and Installation of	
Dimensions and Weights .....	10-00-8	Final Drives .....	10-20-11
Predelivery, Delivery and		Removal and Installation of	
After-Sales Inspections .....	10-00-9	Rockshaft .....	10-20-12
Lubrication and Service .....	10-00-10		
Tune-Up .....	10-00-11		
Tractor Separation .....	10-00-12		
Standard Torques .....	10-00-13		
Special Tools .....	10-00-15		

Group 00

**SPECIFICATIONS AND SPECIAL TOOLS**

**SPECIFICATIONS**

**SERIAL NUMBERS**

The engine serial number is stamped into the plate located on the lower front right-hand side of the cylinder block.

*NOTE: When ordering engine parts, quote all digits of serial number stamped on the plate.*

The plate showing the tractor serial number is located on the right-hand side of the front axle carrier.

*NOTE: When ordering tractor spare parts (excluding engine parts), quote all digits and letters of serial number stamped on the plate.*

A plate showing the tractor type, transmission serial number, (and cone point measurement etched into pinion face of differential drive shaft as well as reduction of differential) is located on the right-hand side of the transmission case.

**MODEL NUMBERS**

*The fuel injection pump, fuel injection nozzles, alternator, starting motor, and hydraulic pump have model numbers for positive identification.*

**ENGINE**

Number of cylinders ..... 3

Cylinder liner bore ..... 106.5 mm (4.19 in.)

Stroke ..... 110 mm (4.33 in.)

Displacement ..... 2940 cm<sup>3</sup> (179 cu.in.)

Compression ratio

2150 up to engine serial no. 554175CD and  
2255 up to engine serial no. 570858CD ..... 16.8 : 1

2150 from engine serial no. 554176 CD and  
2255 from engine serial no. 570859 CD ..... 17.4 : 1

Maximum torque

2150 at 1400 rpm  
Up to engine serial no. 571078 CD ..... 175 N·m (129 lb-ft)  
From engine serial no. 571079 CD ..... 185 N·m (136 lb-ft)

2255 at 1400 rpm  
Up to engine serial no. 581072 CD ..... 185 N·m (136 lb-ft)  
From engine serial no. 581073 CD ..... 192 N·m (141 lb-ft)

Firing order ..... 1 - 2 - 3

**Thank you very much for reading.**

**Go back to the website, at its bottom.**

**There is a button. Complete the process. You can get this complete manual instantly. NO WAITING.**

**Please click here.**



**GET MORE CONTENTS:**

**Power Transmission, Brake, Steering, Frame and Wheel, Hydraulic, System, Functional Description, Electrical System and more.....**

**Have questions. Please write to me.**

**aservicemanuapdf@yahoo.com**