5105 and 5205 Tractors

For complete service information also see:

Component Technical Manuals 3029

Engine CTM8
Alternators and Starting Motors CTM77

John Deere Augusta Works
TM1792 (20MAR00)
LITHO IN U.S.A
ENGLISH

Contents

SECTION 10—General Information
Group 05—Safety
Group 10—General Specifications
Group 20—Fuel and Lubricants
Group 25—Serial Number Locations
Group 30—Features and Accessories

SECTION 20—Engine Repair
Group 05—Engine
Group 10—Cooling System

SECTION 30—Fuel and Air Repair
Group 05—Fuel System
Group 10—Air Intake System
Group 15—Speed Control Linkage

SECTION 40—Electrical Repair
Group 05—Battery, Starter and Alternator
Group 10—Electrical System Components
Group 15—Wiring Harness

SECTION 50—Power Train Repair
Group 05—Clutch Housing
Group 10—Clutch Assembly
Group 15—Transmission
Group 20—Rear PTO
Group 25—Differential
Group 30—Final Drives
Group 35—Mechanical Front Wheel Drive

SECTION 60—Steering and Brake Repair
Group 05—Steering Repair
Group 10—Brake Repair

SECTION 70—Hydraulic Repair
Group 05—Hydraulic Pump and Filter
Group 10—Rockshaft
Group 15—Selective Control Valve (SCV)
Group 20—Hydraulic Mid Mount Coupler

SECTION 80—Miscellaneous Repair
Group 05—Front Axle—2WD
Group 10—Wheels
Group 15—3-Point Hitch

SECTION 90—Operator Station Repair
Group 05—Seat and Support
Group 10—ROLL-GARD
Group 15—Operator Platform
Group 20—Fenders

SECTION 210—Operational Checkout Procedures
Group 10—Operational Checkout Procedures

SECTION 220—Engine Operation, Tests and Adjustments
Group 05—Component Location
Group 10—Theory of Operation
Group 15—Diagnosis, Tests and Adjustments

SECTION 230—Fuel/Air Operation, Tests and Adjustments
Group 05—Component Location
Group 10—Theory of Operation
Group 15—Diagnosis, Tests and Adjustments

SECTION 240—Electrical System Operation, Tests & Adjust
Group 05—Component Location
Group 10—Theory of Operation
Group 15—Diagnosis, Test and Adjust
Group 20—Wiring Schematics

SECTION 250—Power Train Operation, Tests & Adjustments
Group 05—Component Location—Power Train
Group 10—Theory of Operation—Transmission
Group 15—Diagnosis, Tests and Adjustments—Power Train

SECTION 260—Steering and Brake Operation, Test & Adjust
Group 05—Component Location
Group 10—Theory of Operation
Group 15—Diagnosis, Tests and Adjustments

SECTION 270—Hydraulic System Operation, Test &

Continued on next page

Adjust
Group 05—Component Location
Group 10—Theory of Operation
Group 15—Diagnosis
Group 16—Hydraulic Tests—Without SCV
Group 17—Hydraulic Tests—With SCV
Group 18—Hydraulic Tests—With Mid Mount Control Valve
Group 19—Hydraulic Tests—All
Group 20—Adjustments
Group 21—Hydraulic Schematics

SECTION 299—Dealer Fabricated Tools
Group 00—Dealer Fabricated Tools

Section 10
General Information

Contents

Page

Group 05—Safety 10-05-1

Group 10—General Specifications
Machine Specifications 10-10-1
Drain and Refill Capacities 10-10-3
Machine Dimensions 10-10-4
Ground Speed Estimates 10-10-9
Service Recommendations for O-Ring Boss Fittings 10-10-15
Service Recommendations for Flat Face O-Ring Seal Fittings. 10-10-17
Metric Bolt and Cap Screw Torque Values . . .10-10-18
Unified Inch Bolt and Cap Screw Torque Values 10-10-19

Group 20—Fuel and Lubricants
Diesel Fuel 10-20-1
Fuel Storage 10-20-2
Do Not Use Galvanized Containers. 10-20-2
Fill Fuel Tank 10-20-3
Diesel Engine Oil 10-20-4
Engine Coolant 10-20-5
Liquid Coolant Conditioner 10-20-5
Transmission and Hydraulic Oil. 10-20-6
MFWD Gear Oil 10-20-7
Grease (Specific Application) 10-20-7
Grease 10-20-8
Alternative and Synthetic Lubricants 10-20-8
Lubricant Storage 10-20-9

Group 25—Serial Number Locations
Serial Numbers 10-25-1
Product Identification Number Location 10-25-1
Engine Serial Number Location. 10-25-1
Fuel Injection Pump Serial Number Location. . .10-25-1
Alternator Serial Number Location. 10-25-2
Power Steering Valve Serial Number Location. 10-25-2
Starter Serial Number Location 10-25-2
Transmission Serial Number Location 10-25-2
Front Axle (2WD) Serial Number Location. 10-25-3
Mechanical Front Wheel Drive (MFWD) Serial Number Location 10-25-3

Group 30—Features and Accessories
Features and Accessories. 10-30-1
Standard Features. 10-30-2
Factory Installed Optional Equipment 10-30-4
Field Installed Optional Kits and Accessories 10-30-5

Recognize Safety Information

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

T81389 –UN–07DEC88

DX,ALERT –19–29SEP98–1/1

Understand Signal Words

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

⚠ DANGER

⚠ WARNING

⚠ CAUTION

TS187 –19–30SEP88

DX,SIGNAL –19–03MAR93–1/1

Follow Safety Instructions

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

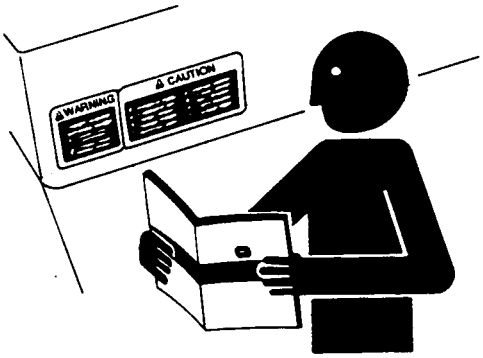

TS201 –UN–23AUG88

DX,READ –19–03MAR93–1/1

Handle Fluids Safely—Avoid Fires

When you work around fuel, do not smoke or work near heaters or other fire hazards.

Store flammable fluids away from fire hazards. Do not incinerate or puncture pressurized containers.

Make sure machine is clean of trash, grease, and debris.

Do not store oily rags; they can ignite and burn spontaneously.

TS227 –UN–23AUG88

DX,FLAME –19–29SEP98–1/1

Prevent Battery Explosions

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).

TS204 –UN–23AUG88

DX,SPARKS –19–03MAR93–1/1

Prepare for Emergencies

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

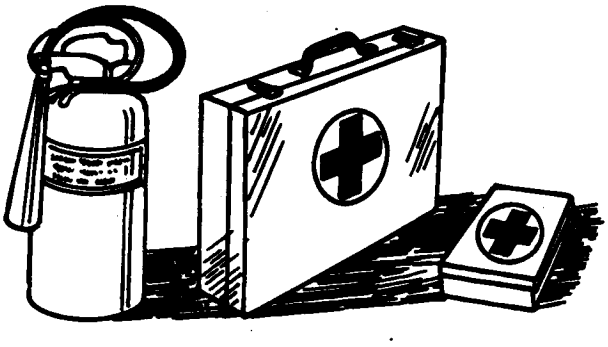

TS291 –UN–23AUG88

DX,FIRE2 –19–03MAR93–1/1

Thank you very much for reading.

Go back to the website, at its bottom. There is a button. Complete the process. You can get this complete manual instantly. NO WAITING.

Please click here.

GET MORE CONTENTS:
Power Transmission, Brake, Steering, Frame and Wheel, Hydraulic, System, Functional Description, Electrical System and more……
Have questions. Please write to me.
aservicemanuapdf@yahoo.com