

Product: EXCAVATOR

Model: 329E LN EXCAVATOR RLD

Configuration: 329E L & 329E LN Excavators RLD00001-UP (MACHINE) POWERED BY C7.1 Engine

Disassembly and Assembly

324E and 329E Excavators and 329E MHPU Mobile Hydraulic Power Unit Machine Systems

Media Number -KENR9844-04

Publication Date -01/04/2015

Date Updated -14/04/2015

i04216221

Travel Motor - Disassemble

SMCS - 4351-015

S/N - JCZ1-UP

S/N - K2L1-UP

S/N - KTE1-UP

S/N - LDG1-UP

S/N - PNW1-UP

S/N - PTY1-UP

S/N - RDX1-UP

S/N - RLD1-UP

S/N - TLF1-UP

S/N - TST1-UP

S/N - WJK1-UP

S/N - ZCD1-UP

Disassembly Procedure

Table 1

Required Tools			
Tool	Part Number	Part Description	Qty

A	1U-7506	Adapter	1
	8T-4244	Nut	6
	8T-4223	Hard Washer	6
	-	Threaded RodM12 x 1.75 by 250 mm (10 in) long	1
B	8T-0651	Bolt	1
	8T-4167	Hard Washer	1
C	3E-3882	Eyebolt	1
D	1P-1859	Retaining Ring Pliers	1
E	1P-0510	Driver Gp	1
	9S-9152	Bearing Puller Gp	1
F	1P-1861	Retaining Ring Pliers	1

Start By:

- A. Remove the travel motor. Refer to Disassembly and Assembly, "Travel Motor - Remove".

NOTICE

Care must be taken to ensure that fluids are contained during performance of inspection, maintenance, testing, adjusting, and repair of the product. Be prepared to collect the fluid with suitable containers before opening any compartment or disassembling any component containing fluids.

Refer to Special Publication, NENG2500, "Dealer Service Tool Catalog" for tools and supplies suitable to collect and contain fluids on Cat products.

Dispose of all fluids according to local regulations and mandates.

1. Thoroughly clean the outside of the travel motor prior to disassembly.
 2. Fasten the travel motor in Tooling (A) in a vertical position. The weight of the travel motor is approximately 60 kg (132 lb).
 3. Put an alignment mark across the head and the body of the travel motor for assembly purposes. The head must be reinstalled in the head's original position on the body of the travel motor.
-



Illustration 1

g00887295

Note: During the removal of head (2) from the travel motor, be careful not to damage the mating surfaces of the components.



Spring force can cause personal injury or death.

Do not repair until you have read the Operation and Maintenance Manual.

4. Remove bolts (1) .
5. Remove head (2) from the body of the travel motor.

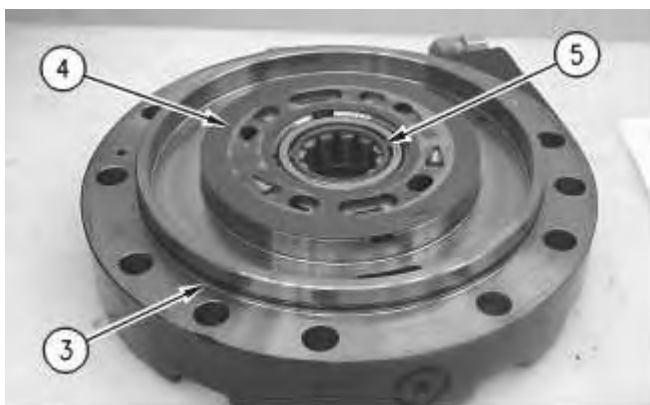


Illustration 2

g00887302

6. Remove O-ring seal (3), port plate (4), and bearing (5) .

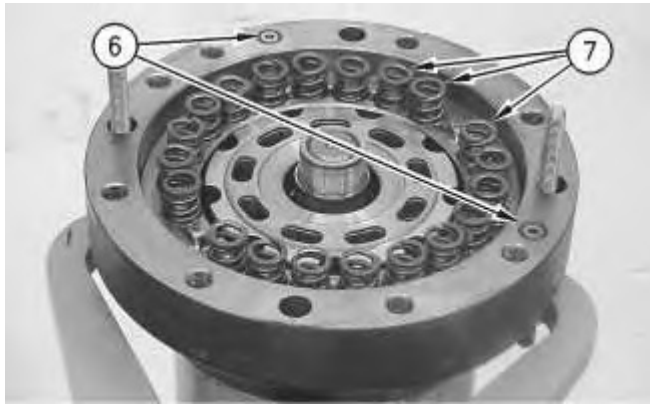


Illustration 3

g00887311

7. Remove O-ring seals (6). Remove springs (7) .

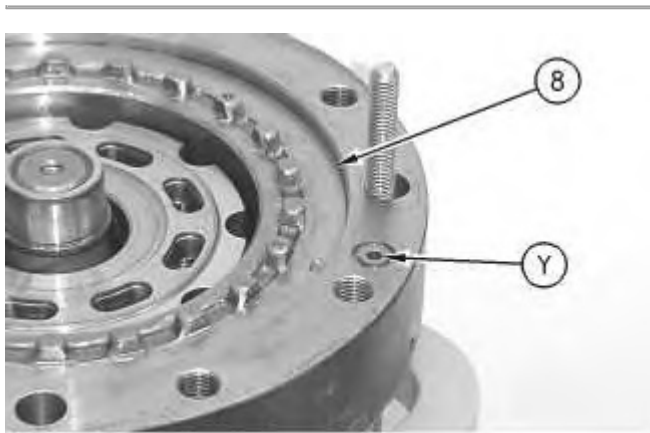


Illustration 4

g00887331

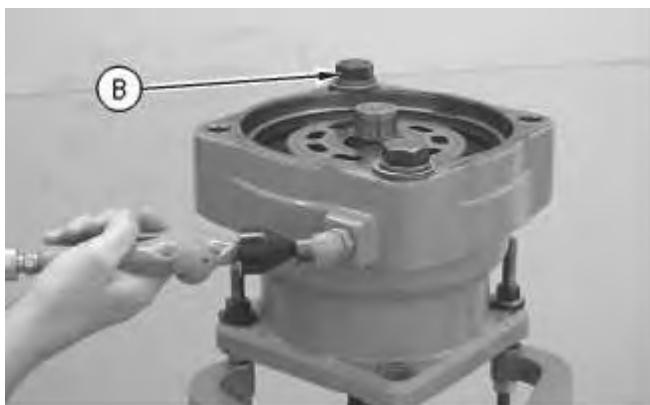


Illustration 5

g00890074

This is an example of the use of Tooling (B) .

8. Place a shop towel over brake piston (8). Retain brake piston (8) with Tooling (B). Apply approximately 525 kPa (75 psi) of shop air pressure to brake release Port (Y). Make sure that the shop air pressure is free of water. Brake piston (8) will move up the piston guide, and out of the piston guide. Remove brake piston (8) from the body of the travel motor.



Illustration 6

g00887336

9. Remove seal (9) and backup ring (10) from the brake piston.
10. Remove seal (11) and backup ring (12) from the brake piston.

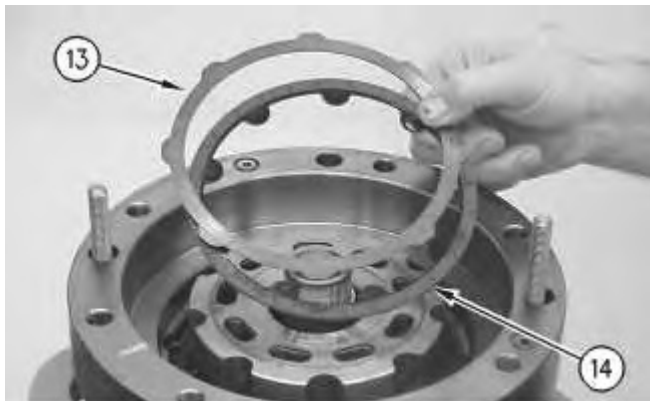


Illustration 7

g00887355

11. Remove plates (13) and friction discs (14) .
-

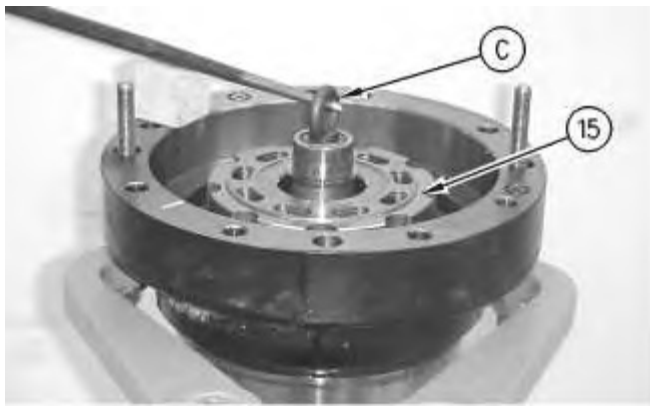


Illustration 8

g00887401

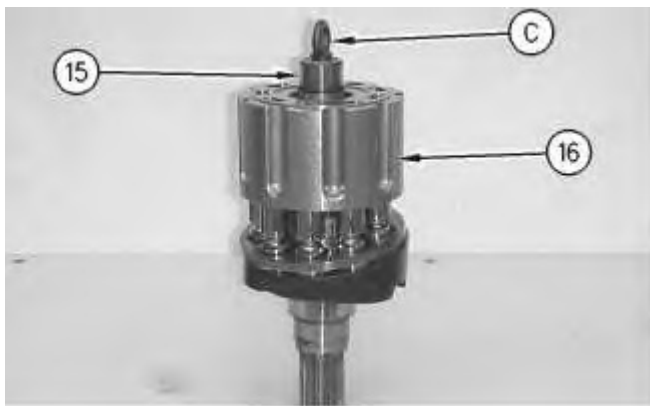


Illustration 9

g00887405

12. Install Tooling (C) into shaft (15). Use a prybar to remove the rotating assembly (16) from the housing.
13. Remove Tooling (C) from shaft (15) .

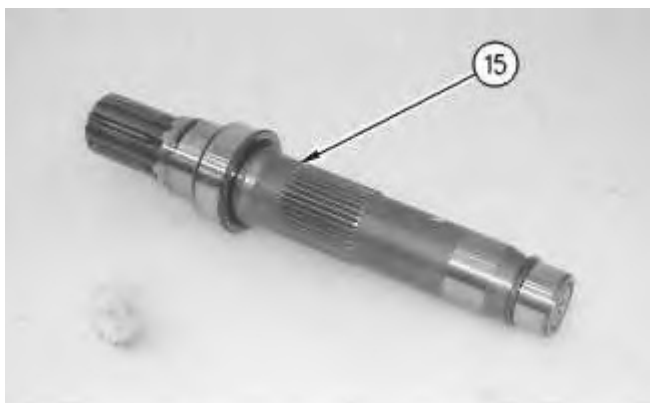


Illustration 10

g00887424

14. Remove shaft (15) from rotating assembly (16) .

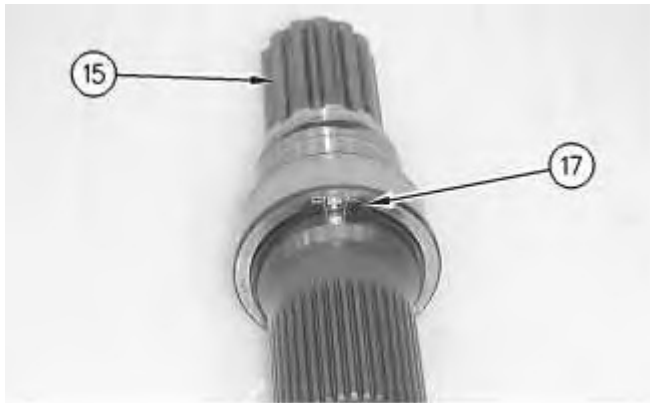


Illustration 11

g00887426

15. Use Tooling (D) in order to remove retaining ring (17) from shaft (15) .


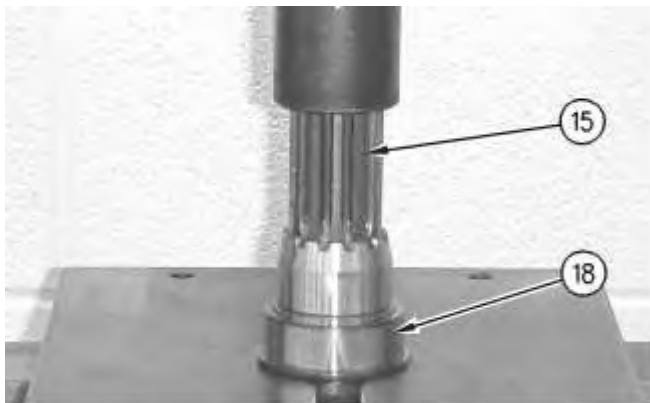


Illustration 12

g00887445

16. Install shaft (15) into a suitable press. Remove bearing race (18) from the shaft.



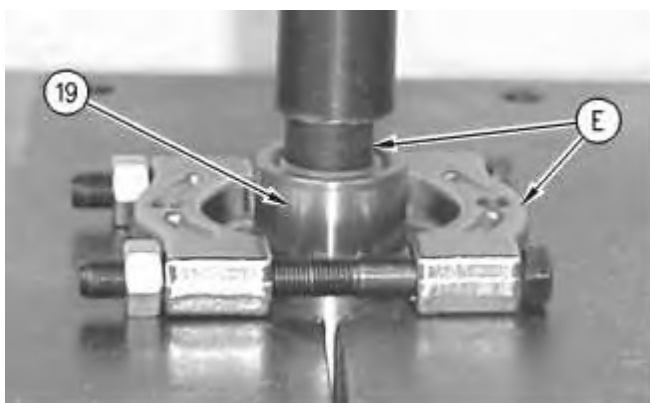

Download the full PDF manual instantly.

Our customer service e-mail:

aservicemanualpdf@yahoo.com